


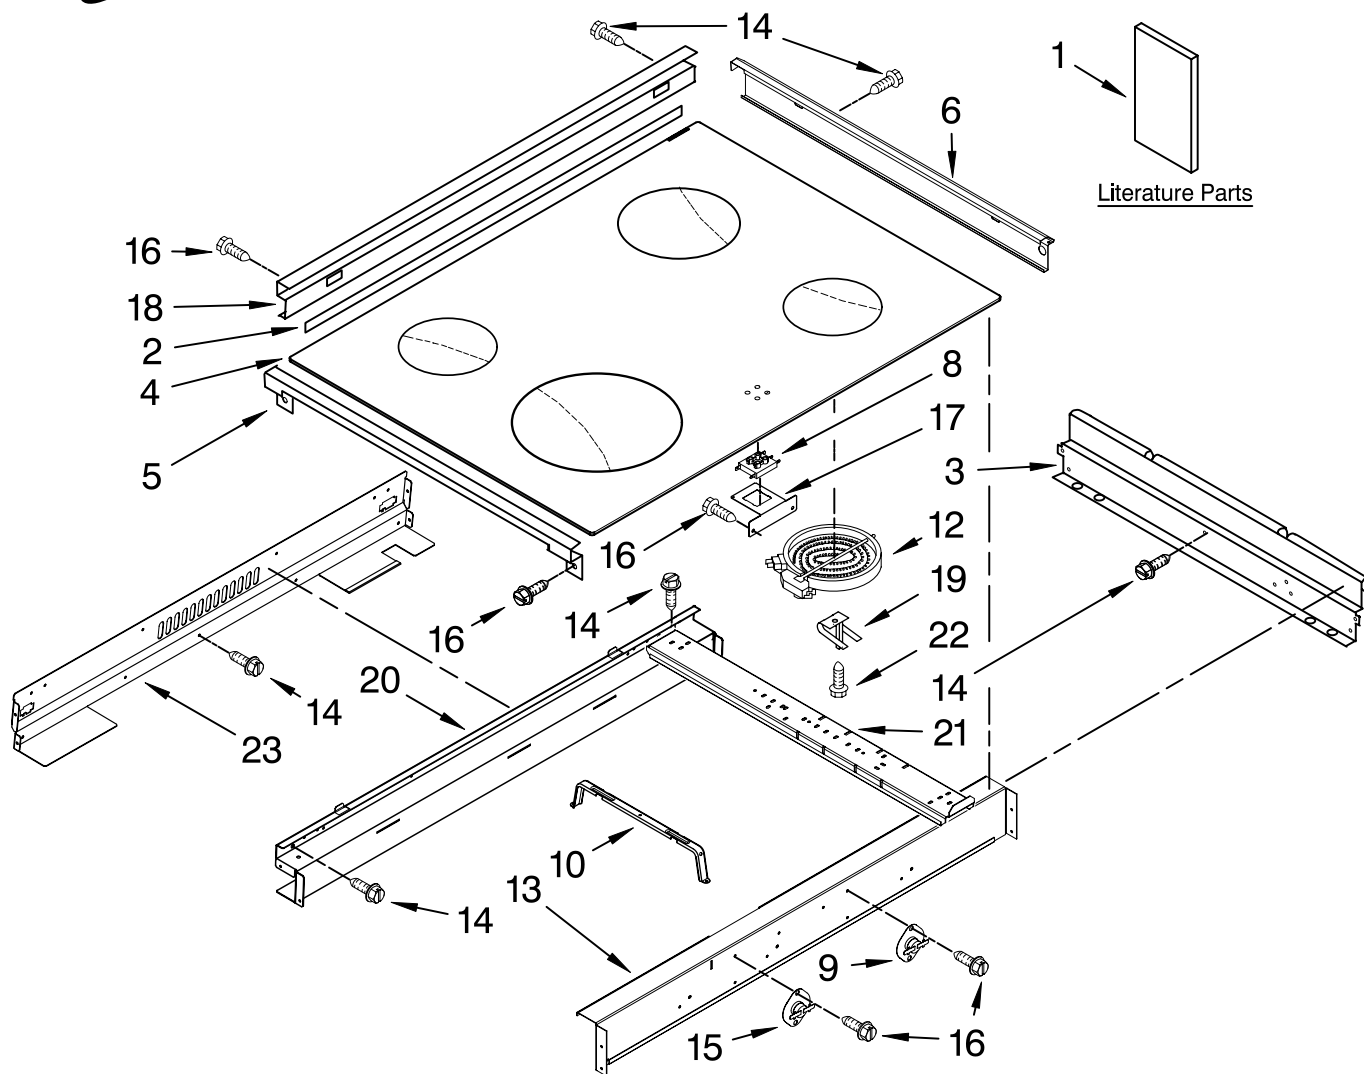

COOKTOP PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

30" Slide-In
ELECTRIC OVEN
SELF CLEAN




Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9762035	Literature Parts	6	9759530BL	Trim, Cooktop SI	13	9757800	Bracket, Front
	9762257	Installation Instructions		9759530WH	Black		3196537	Support
	9761388	Use & Care Guide		9759530BT	White	14	341196	Screw
	9757680	Tech Sheet		9759530SS	Biscuit	15	3196160	Thermostat
		Anti-Tip Instructions			Left	16	9758799	Screw
	3191638	Safe Cooking Tips		9759531BL	Black	17		Bracket, Indicator
	9759133	English		9759531WH	White		18	Lamp
		French		9759531BT	Biscuit			Trim, Extension
2	9756450	Gasket		9759531SS	Stainless		9760520BL	Black
3	4454023	Bracket, Mounting	8	8523739	Light, Indicator		9760520WH	White
4		Cooktop	9	9759944	Thermostat		9760520BT	Biscuit
	9762069BL	Black	10	9756821	Support, Wiring		9760520SS	Stainless
	9756788WH	White	12		Element, Surface	19	9759094	Spring, Locator
	9756788BT	Biscuit		8523698	1200W LR,RF	20	9759963	Bracket, Rear
5	4453764	Clip, Ceran (2)		8523696	1800W RR			Support
				8523692	2500W LF	21	8285962	Rail, Element (2)
						22	246119	Screw
						23	9759628	Cover, Cooktop
								Rear

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

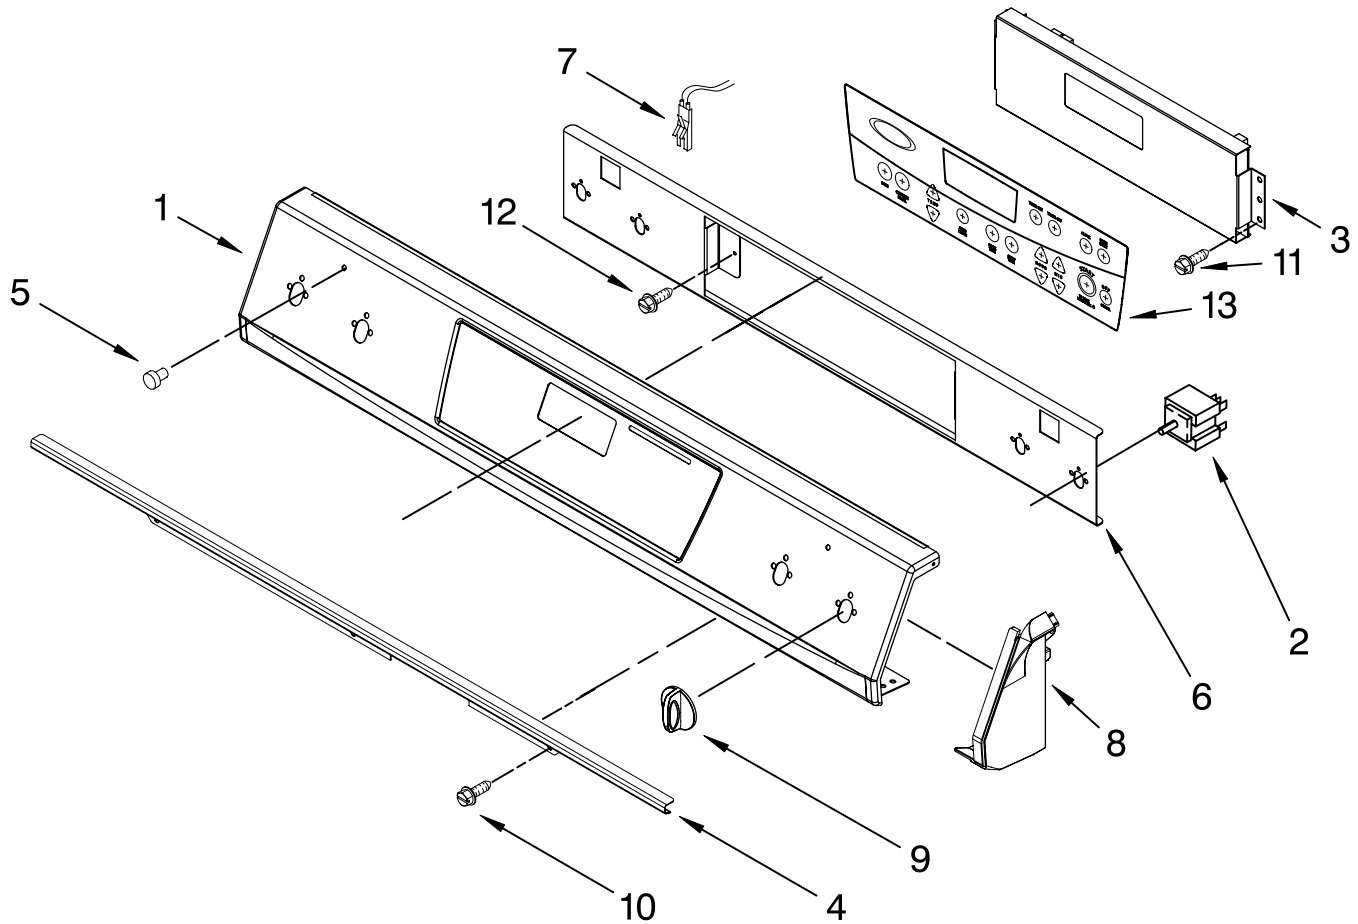

Illus. No.	Part No.	DESCRIPTION
1	W10036010	Control Panel Black
	W10036000	White
	W10035990	Biscuit
	W10035980	Stainless
2	9750638	Switch, Infinite LR, RF
	9750639	RR
	9750641	LF
3	9757476	Control, Migration
4	9757119	Bracket, Console
5	3196068	Lens, Indicator (2)


Illus. No.	Part No.	DESCRIPTION
6	W10036100	Bracket, Oven Control
7	8523265	Housing, Indicator Light (2)
8		Endcap Right
	9756611BL	Black
	9756611WH	White
	9756611BT	Biscuit
	9756614BL	Left Black
	9756614WH	White
	9756614BT	Biscuit

Illus. No.	Part No.	DESCRIPTION
9		Knob
	9756659BL	Black
	9756659WH	White
	9756659BT	Biscuit
10	3196537	Screw
11	9780271	Screw
12	311865	Screw
13	W10078570	Membrane, Switch Assembly

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

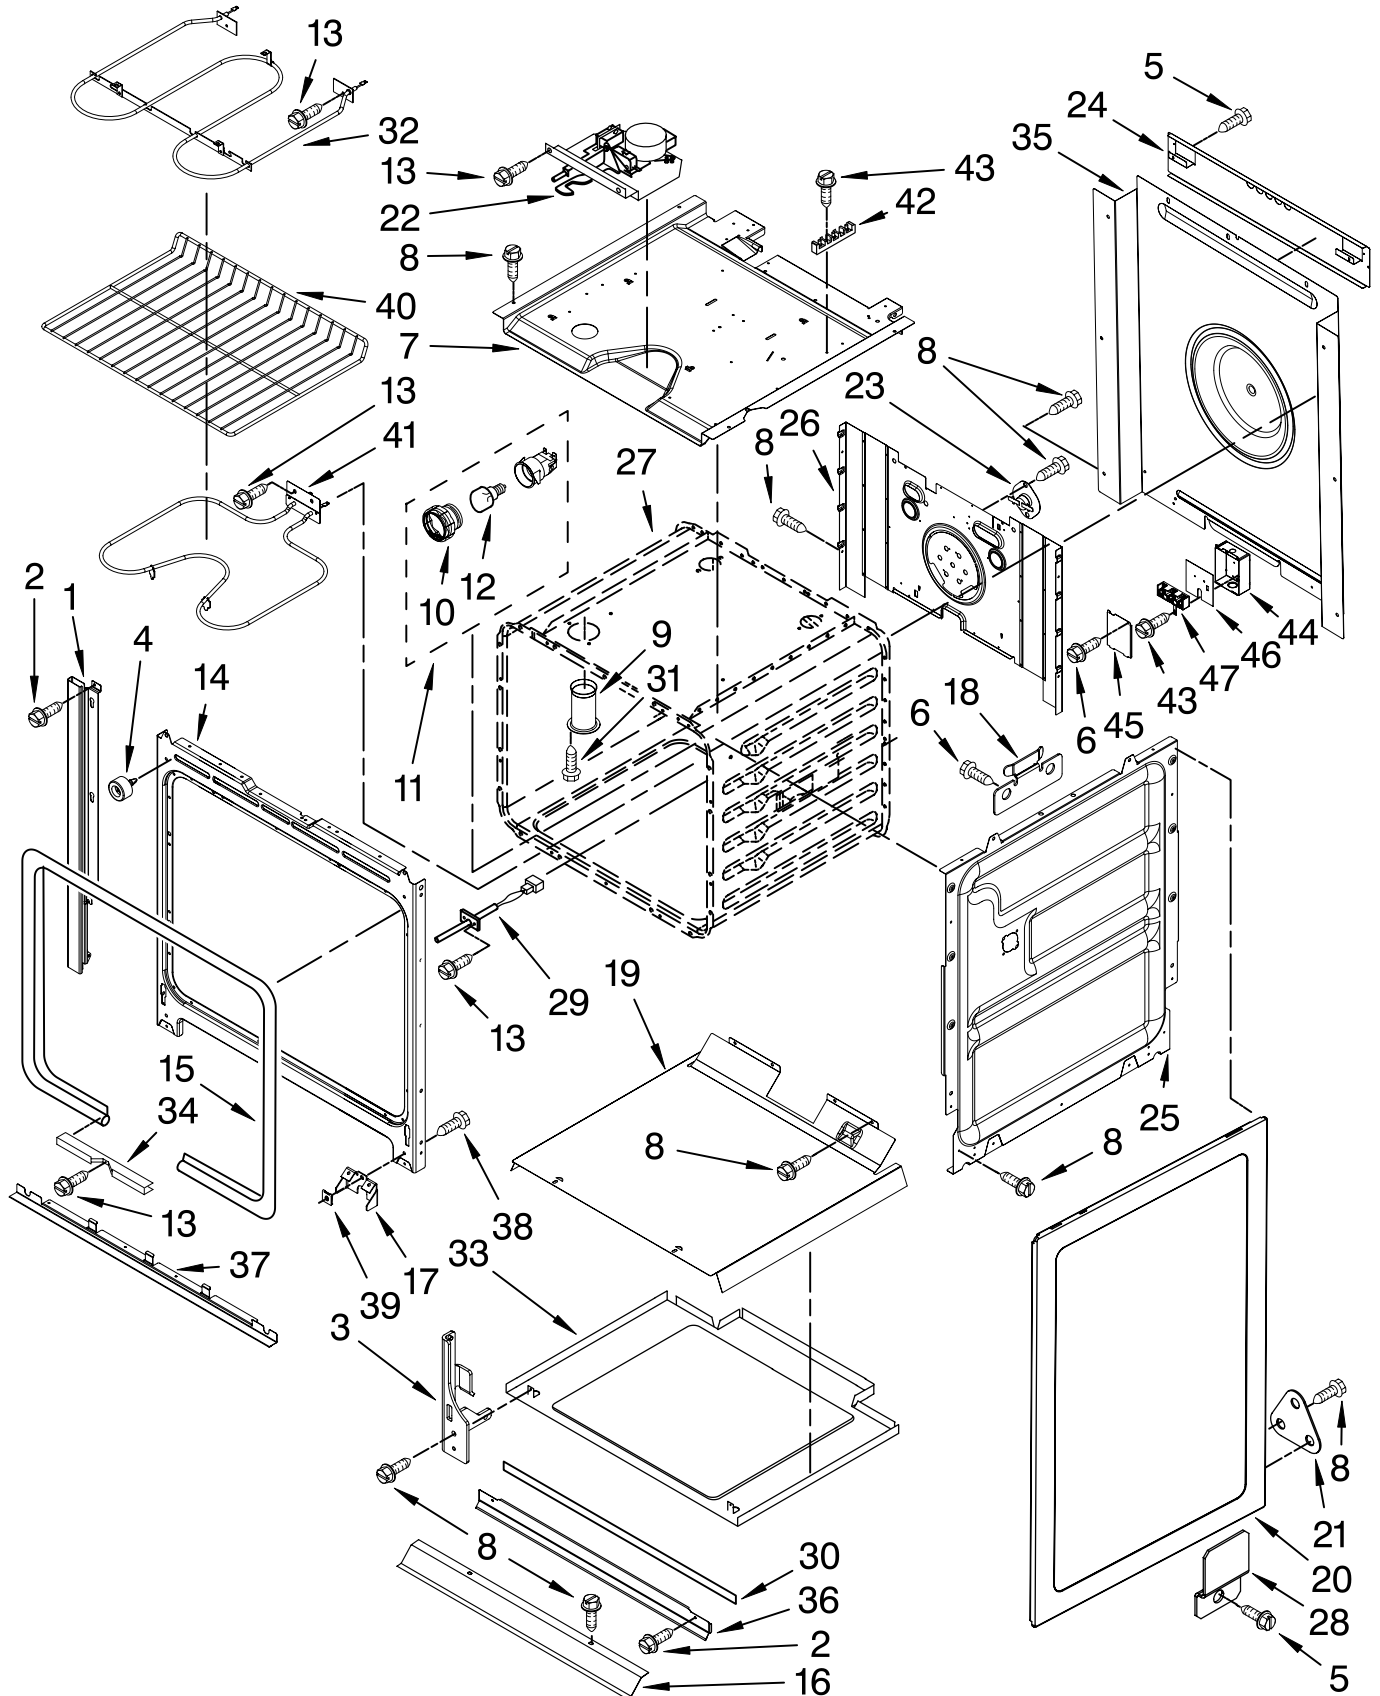

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03

(Black)

(White)

(Biscuit)

(Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right
	9757735BL	Black
	9757735WH	White
	9757735BT	Biscuit
	9757735SS	Stainless
		Left
	9757734BL	Black
	9757734WH	White
	9757734BT	Biscuit
	9757734SS	Stainless
2	3400832	Screw (2)
3		Hinge Receiver
	4455606	Right
	4455605	Left
4	W10105790	Bumper, Door (2)
5	3196537	Screw
6	3196160	Screw
7	8303099	Top Chassis
8	4449809	Screw
9	4452158	Tube, Vent
10	W10067870	Lens, Light (2)
11	W10009930	Oven Light, Assembly (2)
12	4452166	Bulb, Light (2)
13	4449154	Screw
14	9760756	Frame, Front
15	W10074200	Gasket, Door
16	4453951	Deflector, Vent Bottom

Illus. No.	Part No.	DESCRIPTION
17	4452152	Bracket, Mounting
18	9757685	Guide, Side Panel
19	4451478	Support, Insulation
20		Body, Side
	9760723PB	Black
	9760723PW	White
	9760723PC	Biscuit
21	9757461	Bracket, Side Panel
22	9760888	Latch, Motorized
23	9759243	Thermostat
24	9757811	Brace, Side Panel
25	4455641	Side, Chassis
26	4452234	Back, Chassis
27		Liner, Oven (Not Serviceable)
28	9759890	Clip, Side Panel
29	4455636	Sensor
30	9757717	Insulation
31	3196176	Screw
32	9760771	Broil, Element
33	9759713	Base, Chassis
34	4448933	Retainer, Gasket
35	4451747	Cover, Back
36		Vent, Bottom Upper
	9756481BL	Black
	9756481WH	White
	9756481BT	Biscuit
	9756481SS	Stainless

Illus. No.	Part No.	DESCRIPTION
37		Trim, Bottom Vent
	9756485BL	Black
	9756485WH	White
	9756485BT	Biscuit
	9756485SS	Stainless
38	4449743	Screw
39	4450118	Nut
40	4448717	Rack, Oven
41	9760766	Element, Convention Bake
42	4449868	Block, Terminal
43	3400080	Screw
44	9757404	Box, Terminal
45	9757405	Cover, Terminal Box
46	9759721	Insulator, Terminal Box
47	9761958	Block, Terminal

FOLLOWING PARTS NOT ILLUSTRATED


INSULATION

9756817	Insulation, Wrap
9756470	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

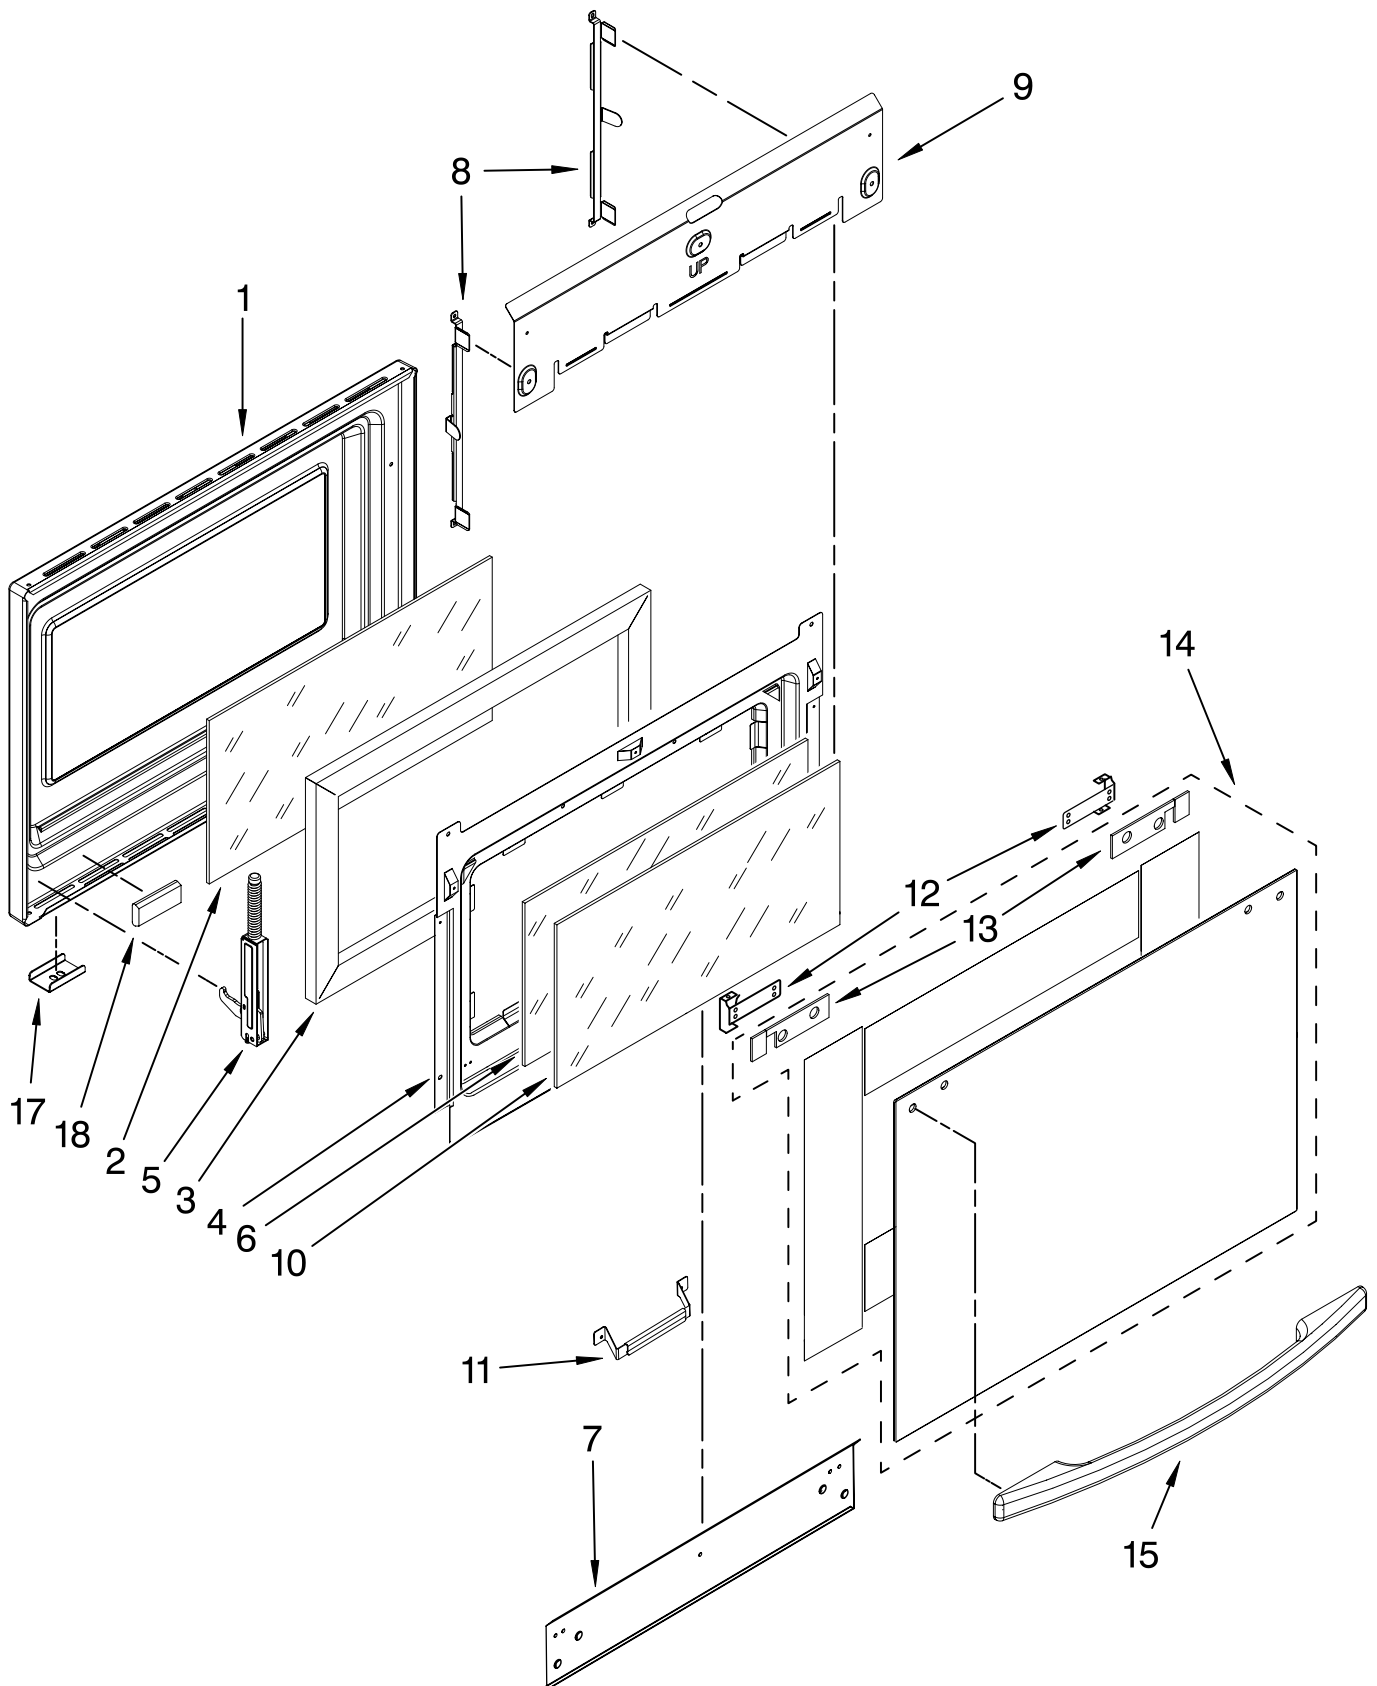

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03

(Black)

(White)

(Biscuit)


(Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9759413	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760571	Right
	9760572	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457103	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12	4450813	Bracket, Handle
13		Pad, Handle
	9759638	Right
	9759637	Left
14	9759641	Assembly, Door Kit
15	4448854	Handle, Door
17	4450863	Retainer, Glass Clip
18	9759635	Spacer, Door Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

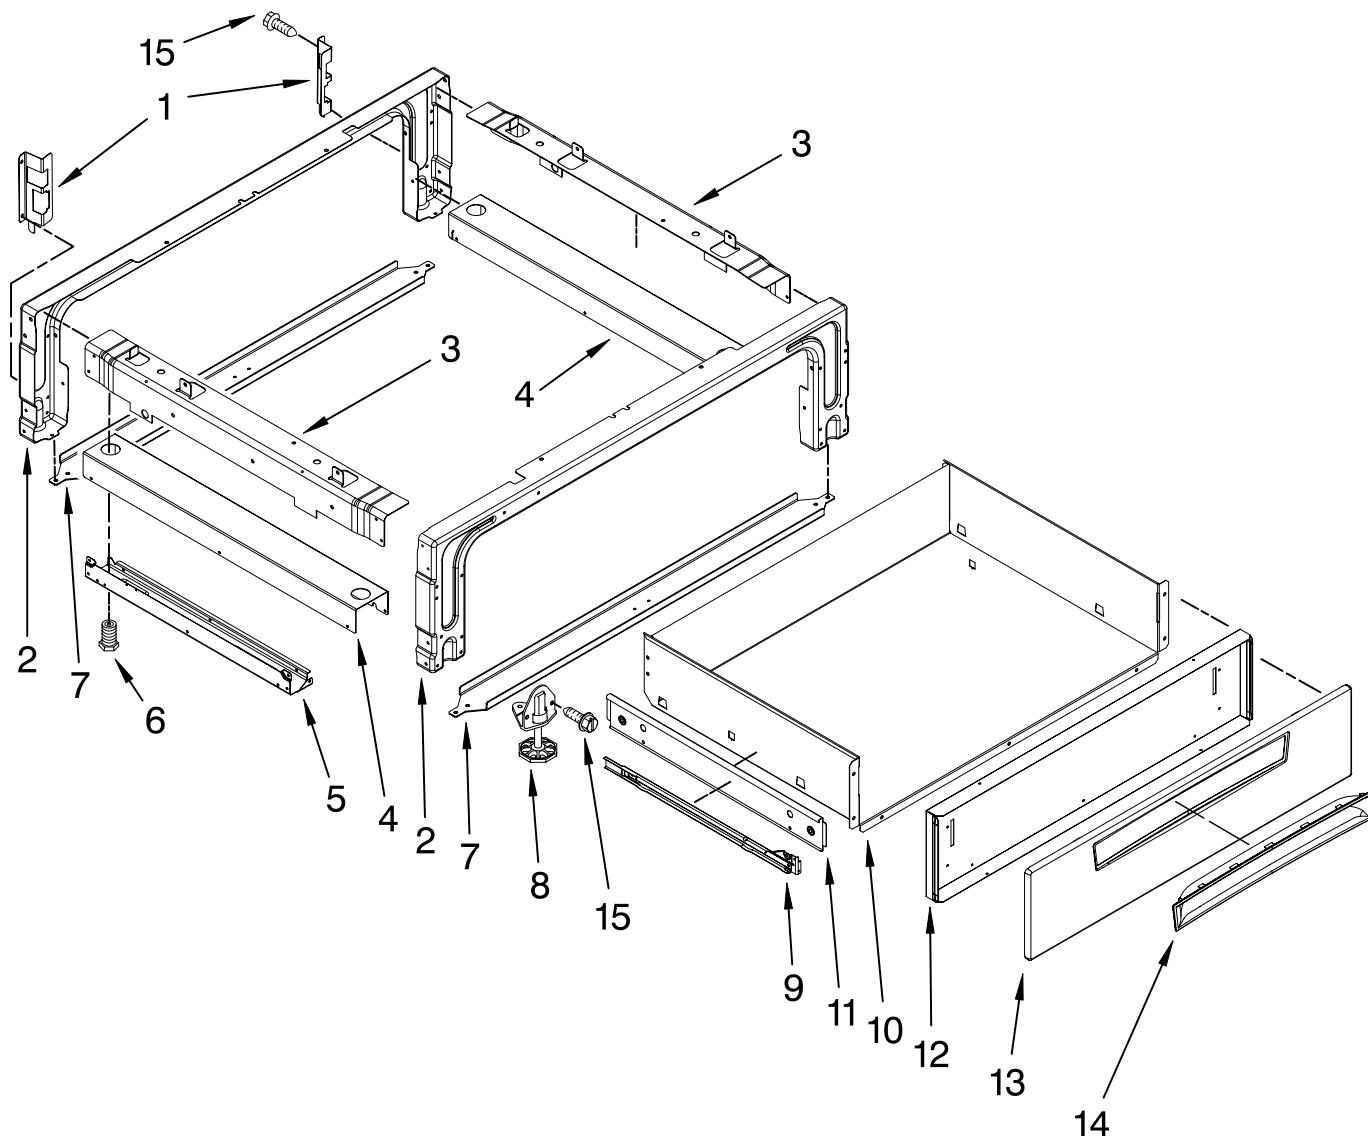

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
4	9759965	Bracket, Base
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
7	9759943	Brace, Front
8	3196037	Foot Assembly
9		Rail, Storage
	9756836	Right
	9756838	Left
10	9757806	Drawer
11		Guide, Roller
		Includes Roller
	9756841	Right
	9756842	Left

Illus. No.	Part No.	DESCRIPTION
12	9760592	Panel, Drawer
13		Front, Drawer
	4453921BL	Black
	4453921WH	White
	4453921BT	Biscuit
	4453921SS	Stainless
14		Handle, Drawer
	9756674BL	Black
	9756674WH	White
	9756674BT	Biscuit
15	3196537	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03
(Black) (White) (Biscuit) (Stainless)

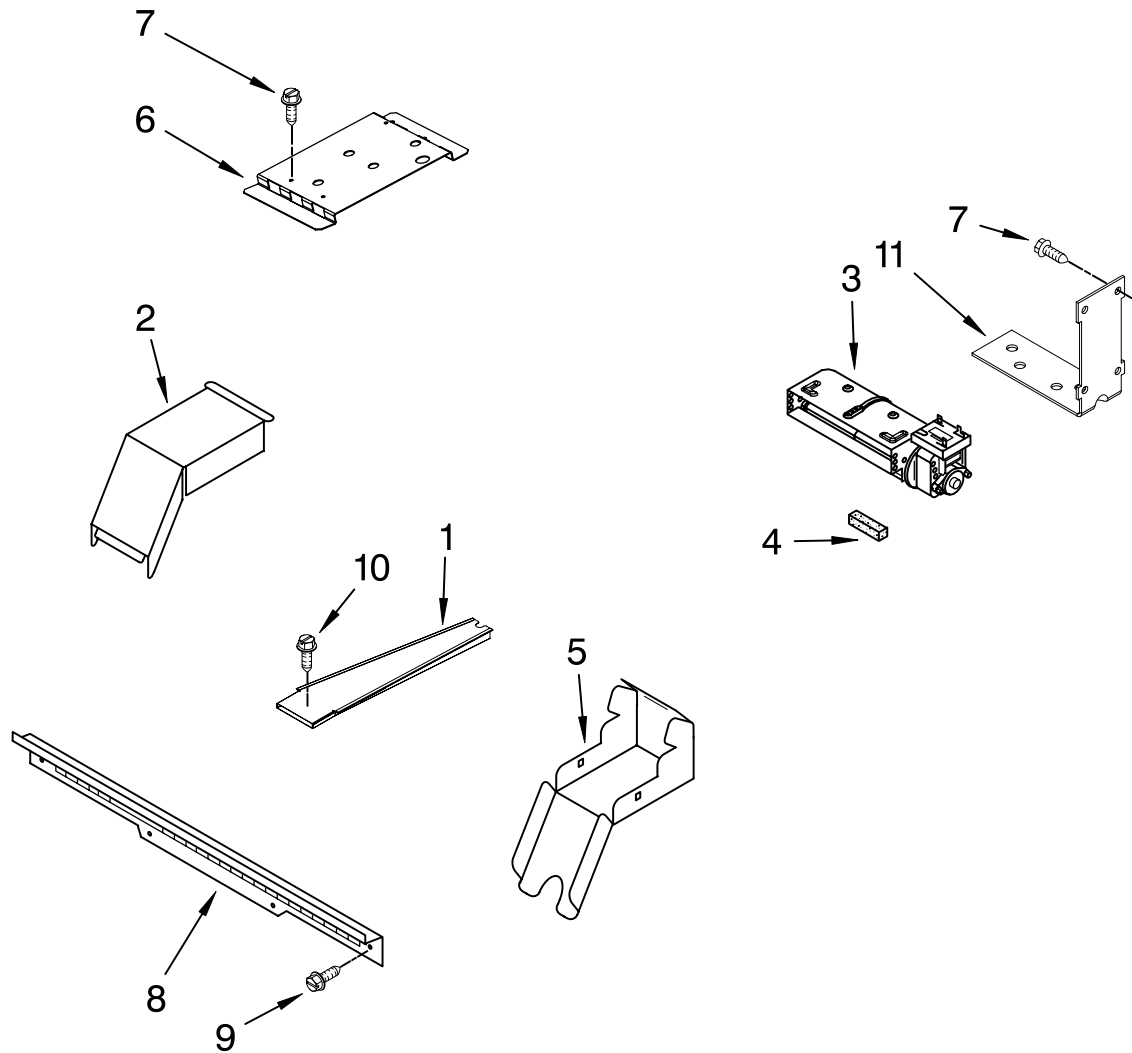

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam

Illus. No.	Part No.	DESCRIPTION
5	4455177	Elbow, Vent Bottom
6	9759938	Bracket, Terminal Box
7	4449809	Screw (2)
8	9757118BL	Vent, Control Panel

Illus. No.	Part No.	DESCRIPTION
9	4450038	Screw
10	4449040	Screw
11	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GY396LXPB03, GY396LXPQ03, GY396LXPT03, GY396LXPS03

(Black)

(White)

(Biscuit)

(Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SPLICING WIRES--25FT.

LENGTH

	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

	9759537	Harness, Wire (Main)
	9759702	Harness, Wire (Cooktop Power)
	9759701	Harness, Wire (Cooktop Left)
	9759703	Harness, Wire (Cooktop Right)
	9759715	Conduit
	3196173	Screw (Conduit)
	313660	Clip, Ground Wire
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4450800	Screw, Ground
	4452222	Spacer, Harness
	3400015	Screw, Ground

Miscellaneous

	9782676	Anti-Tip Assembly
--	---------	-------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST